

1930-31 Ford Model A Victoria Interior Upholstery & Top Kits

Classtique Upholstery kits are made from a collection of original patterns taken from cars restored by us since 1960. Our kits have been sold internationally to many professional installers and they have also helped us perfect our patterns to ensure ease of installation. We use high quality materials and high standards to restore your vehicle to near original specifications.

100% satisfaction guarantee if your order is not received as specified. If an error has been made on our part, we will promptly correct it. Please **return the information sheet** at the end of this packet with your order or have all details available when ordering by phone.

Interior Kit

Tudor Interior Kits include: Seat cushions and backrests covers, panels, headliner, windlace, installation hardware, and instructions. All panel parts are made from automotive panel board pre-cut, covered, and ready to install. The door panels are cut out of a heavy duty automotive waterproof panel board and have the correct pocket details. Upholstery cushion and backrest covers are sewn, padded, and ready to install. Hardware Packages include: Door panel clips, hog rings and pliers, tacks, panel brads with needle, screws and washers, and extra cotton padding to re-pad springs.

Interior kit

1930-31 Victoria.....\$2,655.00

Carpet

Our floor carpet is the wool square weave pattern as original. All sides are bias bound, includes a sewn on pyramid rubber heel pad, correct cutout detailing with the fastener set.

1930-31 Carpet Set\$560.00

Outside Top Kits

Top kits include: top material, lining, padding, welt trim, tacks, and instructions. **Chicken wire not included**

1930-31 Steel Back.....\$160.00

1930-31 Leather Back (Brown or Tan Pebble Grain).....\$280.00

1930-31 Leather Back (Black or Tan Stayfast).....\$450.00


1930-31 Outside Sun Visor Kit.....\$69.00

1930-31 Sun Visors (with brackets).....\$425.00


1930-31 Sun Visors (without brackets).....\$225.00

1930-31 Ford Victoria Headliner measurement information

Variations are found in cars with the wood bow construction. We ask that you check the measurements below ~ please write your measurements next to the approximates we have provided. Measurements should be taken from the front of one bow to the front of the next bow.

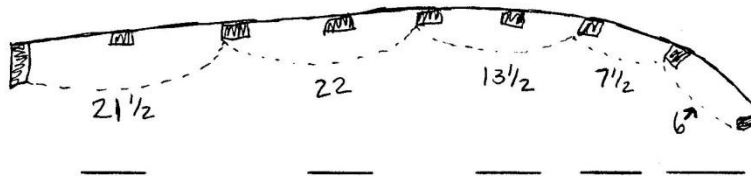

Note: The headliner will not be attached to every bow.

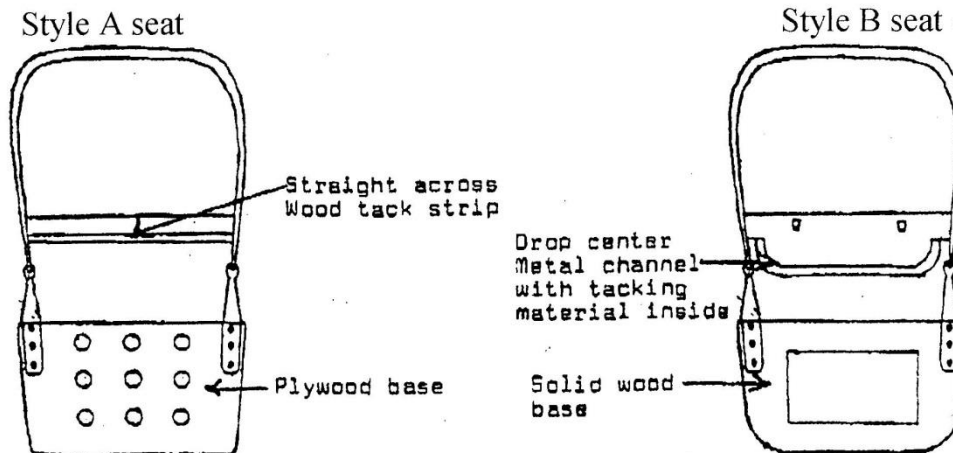

Please initial by the seat style you have: A _____ B _____

Is the car body style
Steelback _____ Leatherback _____